2000 WALLMOUNT- SERIES


BU10051


REV. C

ASSEMBLY INSTRUCTIONS FOR 2P, 2R & 2S SERIES



INNER PANEL ASSEMBLY

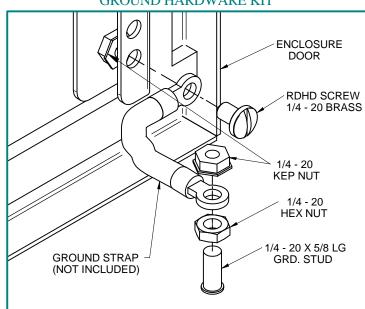


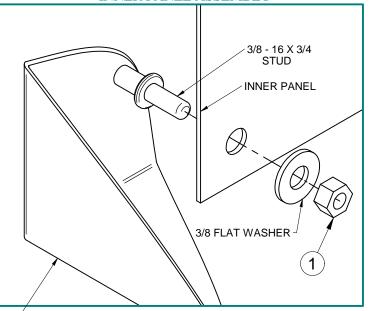


HOLE PLUG ASSEMBLY

ENCLOSURE

MOUNTING FOOT (VERTICAL)

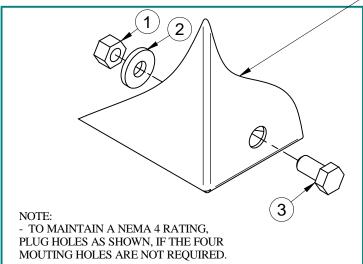

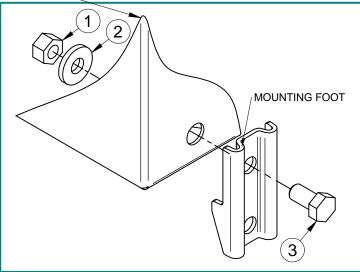

PART#	QTY.	DESCRIPTION
1	4	HEX NUT 3/8 - 16
2	4	3/8 SEALING WASHER
3	4	HEX HEAD BOLT 3/8 - 16 X 3/4

NOTES:

- WHEN MOUNTING THE ENCLOSURE USING INTERNAL HOLES, MAKE SURE THE SURFACE IS FLAT OR SHIM THE SURFACE TO FLATTEN . USE A HEX HEAD BOLT (PART 1) AND A SEALING WASHER (PART 2) (RUBBER SIDE IN CONTACT WITH THE ENCLOSURE).

-TORQUE 3/8 - 16 TO 180" LBS. AND 1/4 - 20 TO 50" LBS.



